



3.8 Replacing the Print head ASS'Y

- 1. Open the printer right side cover.
- 2. Remove 2 screws from the mechanism.

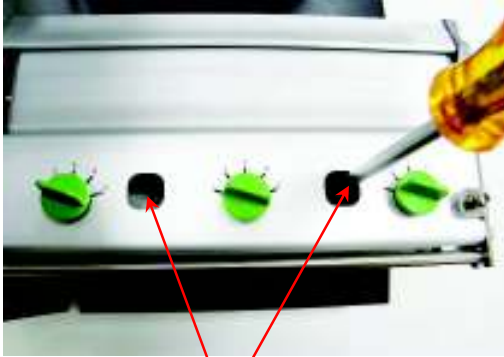


Screws

- 3. Disengage print head release lever.
- 4. Carefully disconnect 2 connectors from the print head ASS'Y.

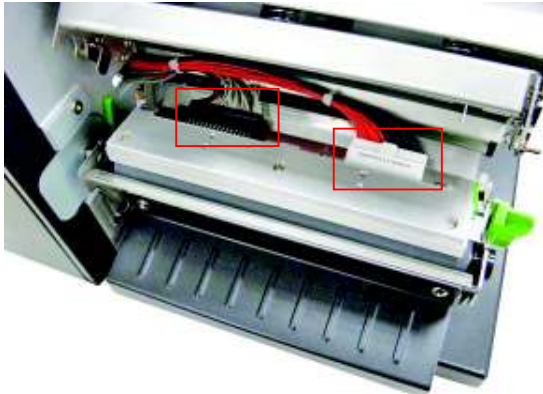


- 5. Replace the print head ASS'Y.

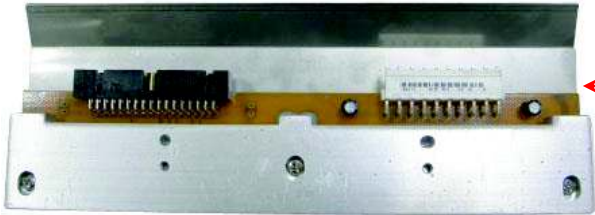

Print head ASS'Y

6. Connect the print head cable and carefully slide assembly into the print mechanism. The holes of print head assembly must align and then insert the tenons of print mechanism.

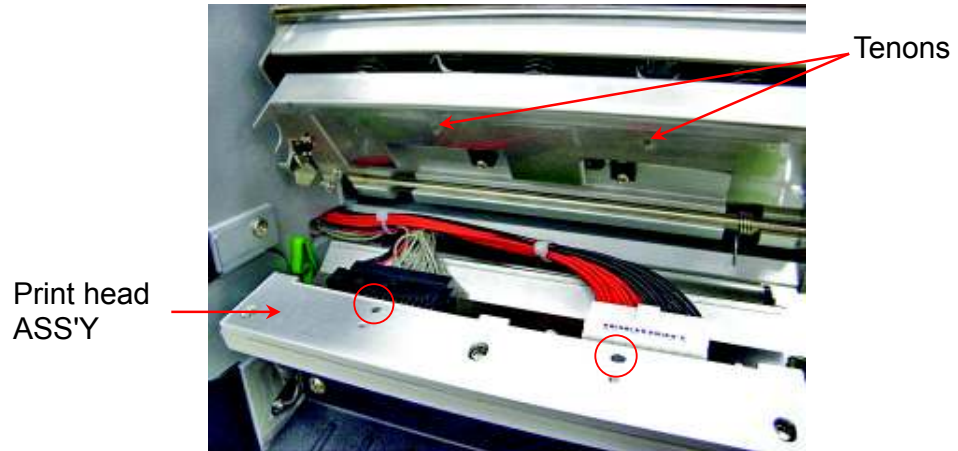

7. Reassemble the parts in the reverse procedures.

